SV Integrated Manifold with D-sub

Pilot-oriented only in 2 series body size with DC24V



Features


- Integrated manifold, with D-sub connector, COM line (in Red) with free non-polar connection.
- Each valve has a single LED indicator on the manifold. Easy to obvious each unit working condition
- Standard SV offers option of 3-14 stations, and maximum for 23 stations
- Plug-in type valve is easy for assembly and maintenance.
- It can greatly save 80% labor cost on site for weir connecting.



Specifications

Model	SV4210-06/08- F -D2									
Port size	1/8" or 1/4"									
Working Medium	Air (to be filtered by 40 µm filter element)									
Acting Type	Internal pilot type / External pilot type									
Reset Type	Air reset / Spring reset									
Lubrication	Not required									
Working Pressure	0.15 - 0.8 Mpa (21 - 114 Psi)									
Max. Proof Pressure	1.2 Mpa (0 - 174 Psi)									
Working Temperature	-5 - 60 (No Freezing)									
Voltage Range	AC: ±15% & DC: ±10%									
Power Consumption	AC220V: 3.5 VA	AC110V: 3.5 VA	AC24V: 4.0 VA	DC24V: 2.5 W	DC12V: 2.5 W					
Insulation & Protection	Class F ; IP65 (DIN40050)									
Connection Form	Line type or Terminal type									
Highest Acting Frequency	5 Cycles / Second									
Shortest Excitation Time	0.05 Second									

Flow Chart:

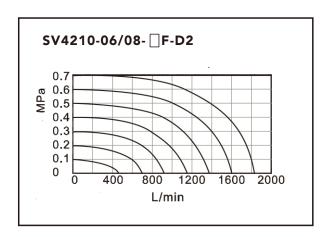




SV Integrated Manifold with D-sub

Pilot-oriented

only in 2 series body size with DC24V




Ordering Code

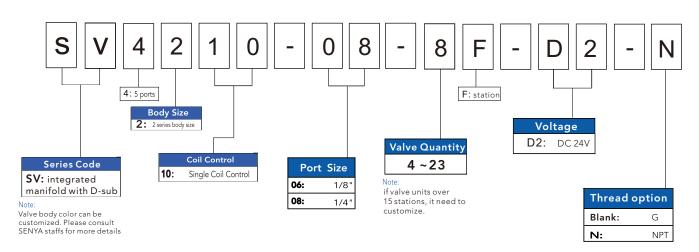

Ordering Example:


SV integrated manifold with D-sub, 5/2 ways, 1/4 " G thread, 7 stations, DC24V, single control.

SENYA part# SV4210-08-7F-D2

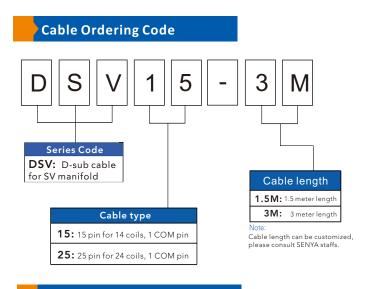



Bland Plate Ordering Code

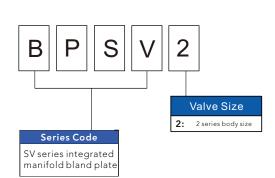




SV Integrated Manifold with D-sub


Pilot-oriented only in 2 series body size with DC24V




Product Dimensions:

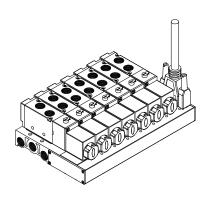



Cable Connecting Instruction:

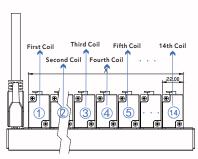

- The **red cable** as COM line (connecting power + polar)
- Each white line is a cable number corresponds to the matched coil position. (connecting power - polar)
- The one **black cable** as the earth wire (E) as the voltage leakage protection.
- If finds the LED indicator flicker but not constant lighting while valves working, please reconnect the cable of the polarity conversion.

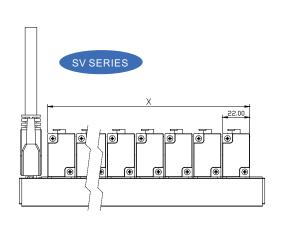

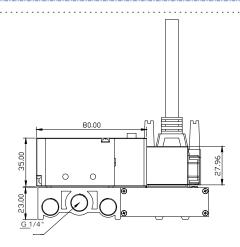

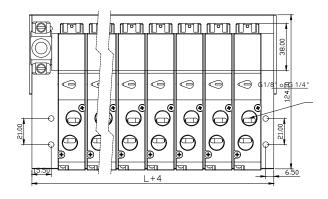

Stations Code	4F	5F	6F	7F	8F	9F	10F	11F	12F	13F	14F
L	124	147	170	193	216	239	262	285	308	331	354
Х	93	116	140	163	187	211	234	258	281	305	329